


Metronome™ -Flip Top Installation

THIS DRAWING IS CONFIDENTIAL AND PROPRIETARY. NO PART OF THIS DRAWING MAY BE COPIED, DISCLOSED TO ANY THIRD PARTY OR USED FOR ANY PURPOSE WITHOUT THE EXPRESS WRITTEN AUTHORIZATION OF NIENKÄMPER FURNITURE & ACCESSORIES



- 1) Place table top face down on a blanket or other protective surface.
- 2) Align threaded inserts pre-installed in the top with through holes in base mounting plates and secure using (qty 8) 1/4"-20 x 1" joiner bolts supplied. Be sure that the release cable assembly is on the side of the 2 center threaded inserts as shown in images.
- 3) Install the 2 shoulder bolts supplied by screwing into pre-installed threaded inserts.
- 4) Before installing the cable cover please make note of the proper wire and tab position.
- 5) Locate cable cover, align leather tab with notch in cover and through holes with pre-drilled pilot holes in top. Fasten with supplied #6 x 5/8" pan head wood screws.
- 6) Carefully rotate the table onto its wheels.

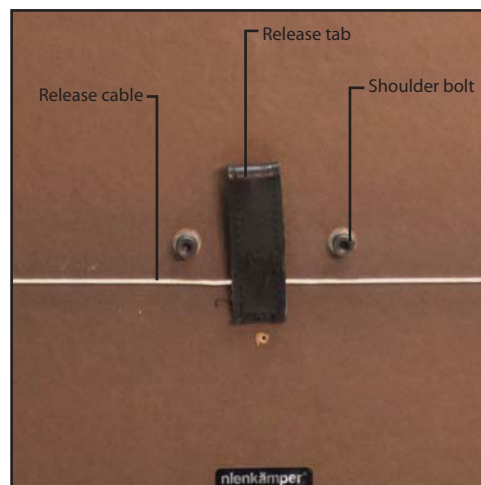

Tab and cable position close up detail.